FRS TRAINING SESSION OUTLINE (preferred settings are underlined)





- 1. WHY THE MOTOROLA 350? Stronger signal than many, AA batteries can be used, consistency among users, reliability.
- 2. CHANGING BATTERIES Alkaline preferred (never use a charger on alkaline batteries!).
- 3. TURNING RADIO ON/OFF some have a power button, others have a rotating knob for power & volume.

The following settings (exc. 19) are accessed by using the Menu and + or - buttons

- 4. CHANNELS indicated by large number on screen, 1-7 have high power capability (1.5w) but have to press upper portion of PTT. Ch. 8 22 are FRS (.5w only). WE USE CH 2 AND OTHER HIGH POWER CHANNELS.
- 5. TO SET CHANNEL press MENU 1x, large number blinks. Use + or to set desired chan., then press PTT to set. <u>4SAB uses Ch. 2 normally</u>.
- 6. SET VOLUME tap the + or buttons to adjust. Typically a volume of 8 to 10 is good. (Only on the non- 'Audio knob' models. Otherwise simply adjust the Audio knob ½ way.
- 7. INTERFERENCE ELIMINATOR CODE (EXCLUSION CODE). Press Menu 2x and small number blinks. Use + or to set to 0 to receive all transmissions, or 1 121 to only receive transmitters using that particular code. <u>4SAB uses 0 normally.</u>
- 8. CALL TONES 30 available tones. Press Menu 3x. Blinking tone number and music note appear; use + or to select tone that will be xmitted. <u>Set to 0 to turn Off.</u>
- 9. IVOX Hands free op w/o accessories. Press Menu 4x use + or to turn On or Off.

10. VOX Hands free op w/accessories. Press Menu 5x, use + or – to set sensitivity 1-3. Don't use.

11. EXTENDED BATTERY SAVE MODE only on 'audio knob' radios. Do not use this feature.

- 12. Qt NOISE FILTERING needs Call tone (8) and Interference Eliminator (7) set On. Press Menu 6x, use + or to turn On or <u>Off</u>.
- 13. VIBRA-CALL Press Menu 7x, use + or to turn <u>On</u> or Off.
- 14. KEYPAD TONES Press Menu 8x and music note appears, use + or to turn On or Off.
- 15. TALK CONFIRMATION TONE at end of xmit. Press Menu 9x and loudspeaker appears, use + or to turn On or <u>Off</u>.
- 16. KEYPAD LOCK Press and hold Menu until lock symbol appears at top of screen. Repeat to unlock
- 17. SCANNING CHANNELS Set Interference code to 0 (step 7), tap scan button. If station is heard, scanning will stop and their interference code appears. Press PTT to talk; resumes scanning 5 sec after talking. Stop scanning by tapping the scan button.
- 18. AUTO SHUT=OFF Press Menu 10x and use + or to set 90, 60, or 30 minutes. 0 turns feature <u>Off</u>. This feature is not in the 'Audio knob' radios.
- 19. NOAA WEATHER CHAN Press and hold Cloud button for 5 sec, Cloud and large number appear, Within 5 sec press Menu, number blinks, then + or to set to <u>Channel 6</u>, then Press Menu again, On or Off blinks, and + or to set Alert to <u>On</u> or Off. Press Cloud to return to Walkie-talkie operation.
- Notes: the Weather Channels (1 11) are not the same as the communication channels.
 - A 'Cloud' appears on-screen while communicating when Alert is turned <u>On</u>, but you will automatically receive alert messages only if you are tuned to WX channel.

Self-Check Quiz:

- 1. What channel does 4SAB use for Net Control? [2]
- 2. What Interference Eliminator number does 4SAB normally use? [0]
- 3. Should Vibra-Call be turned On or Off? [On]
- 4. How do you transmit with increased power on channels 1 7 only? [press upper section of the PTT]
- 5. What setting of the Interference Eliminator will hear all transmissions on the channel, even if they are using a different Interference Eliminator code? [0]
- 6. What is the effective range of the Motorola 350R? [1/2 to 1 mile]
- 7. How can you change volume if you don't have the model with a knob on top? [Tap + or button.
- 8. What is the NOAA (weather) channel in the Pass area? [6]
- 9. Where is the battery status indicator? [top left of screen]
- 10. What does the filled-in walkie-talkie symbol mean? [increased power available on set channel]
- 11. How should the radio be positioned when talking? [90 deg, 4-6 inches from mouth, talk normally, and try to position the antenna vertically]
- 12. What are the preferred batteries for the 350R? [3 AA alkaline; rechargeable are unreliable]
- 13. Will radio turn off automatically if that feature is set to 0? [No]